



# **IGO**

*instruction manual*

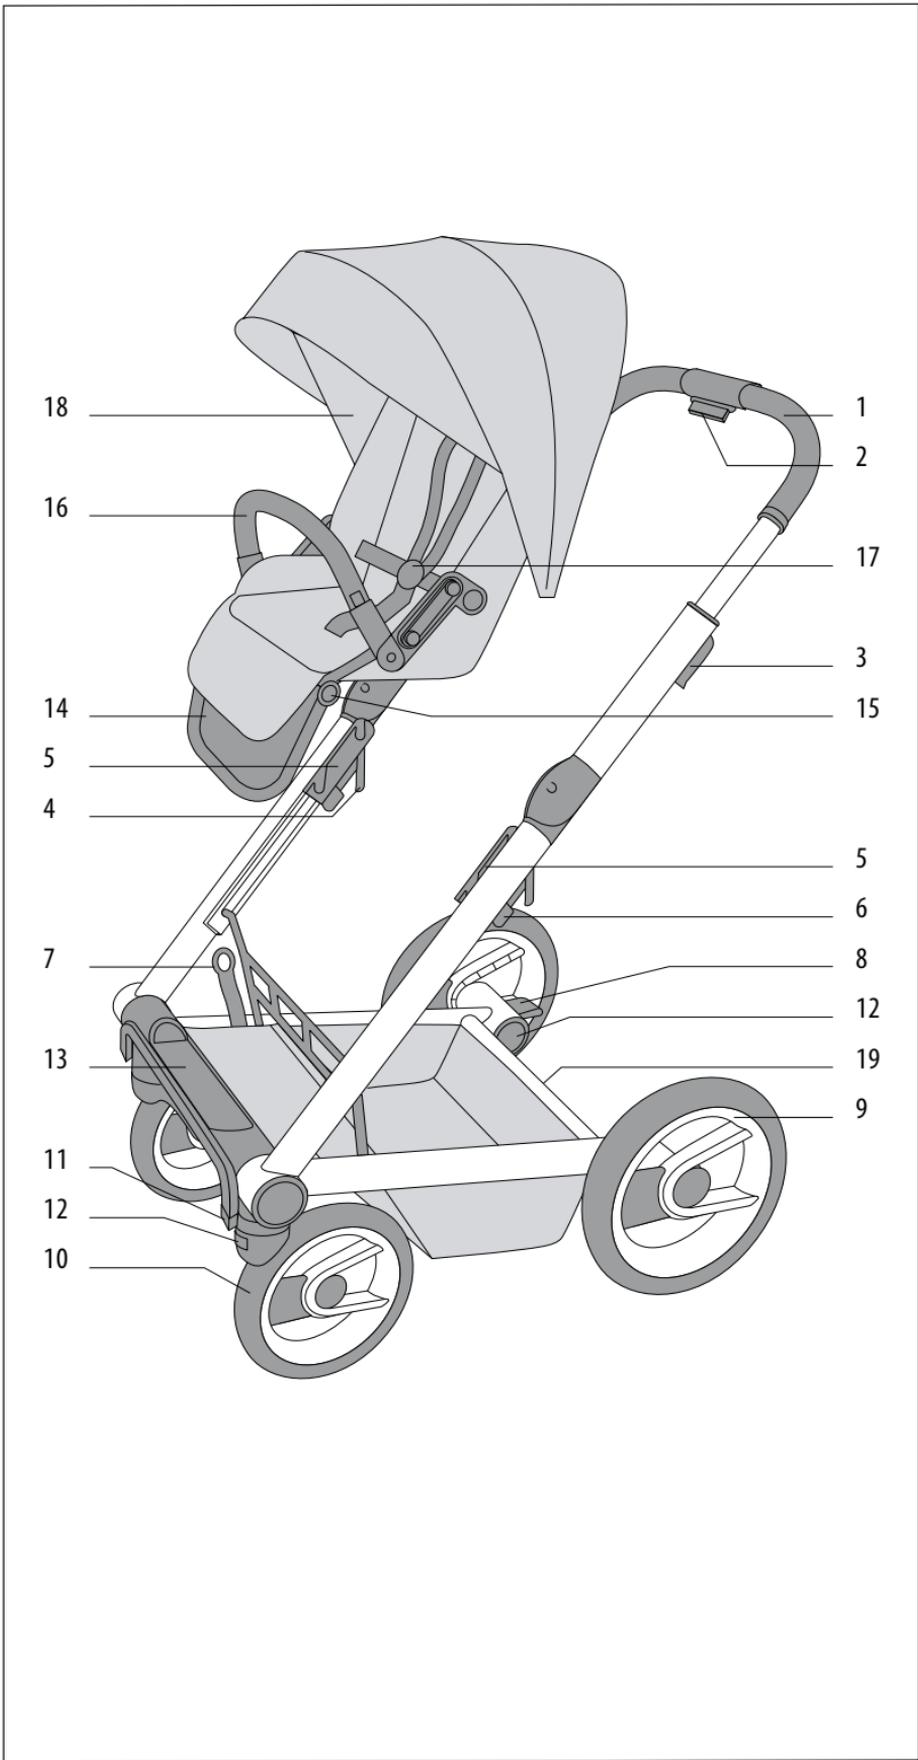


**mutsy**   
simple human magic




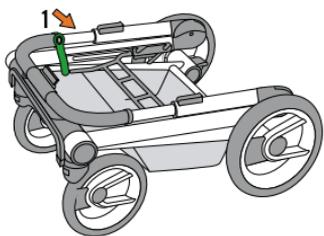


a

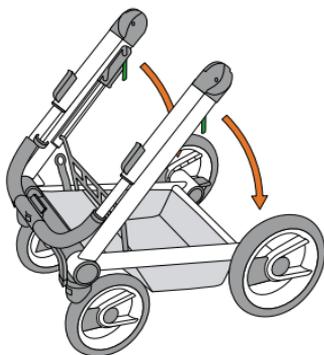


d

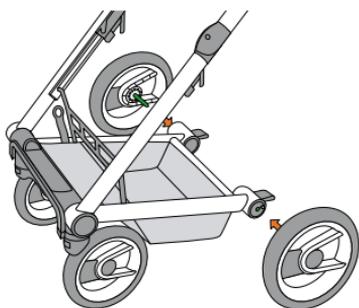


e

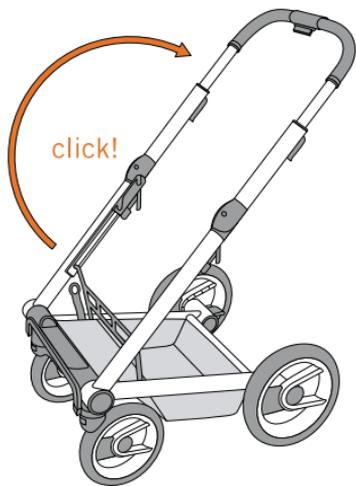


b

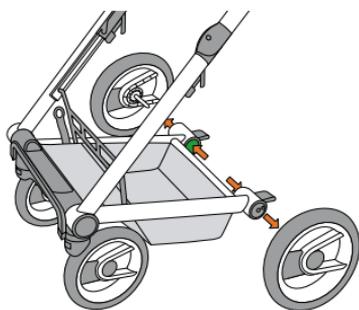


f

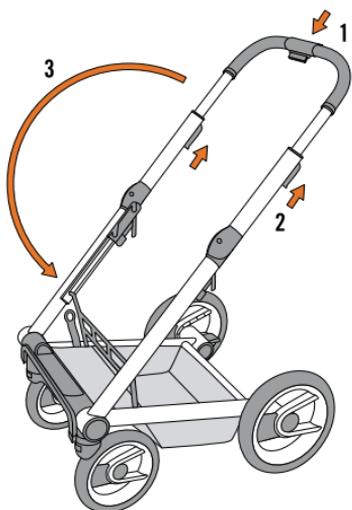


c

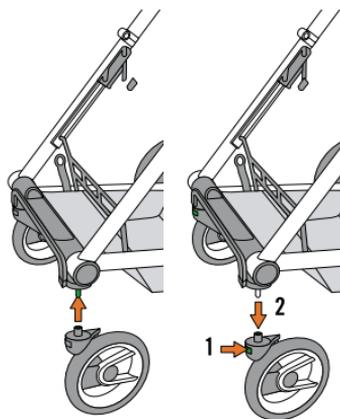


g

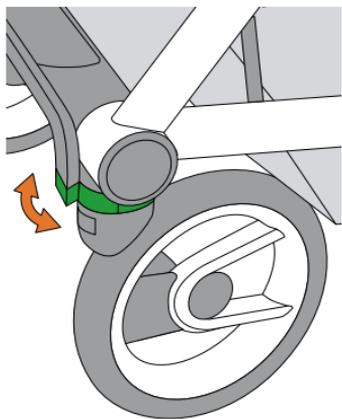


h

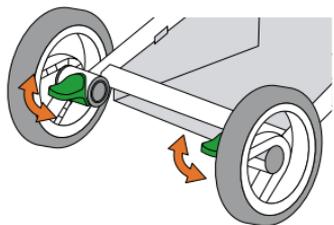

i

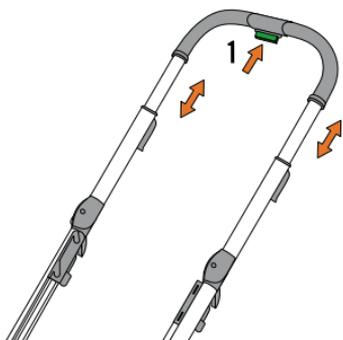


j

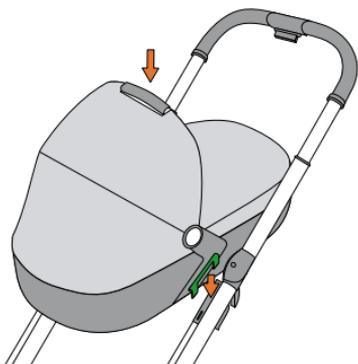

k




l

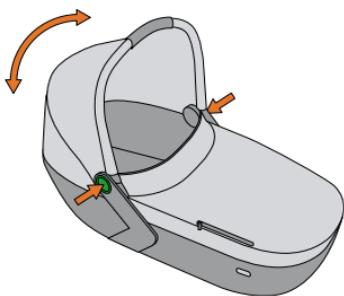


m



n

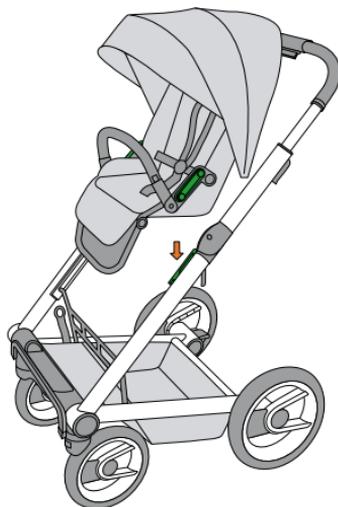


o

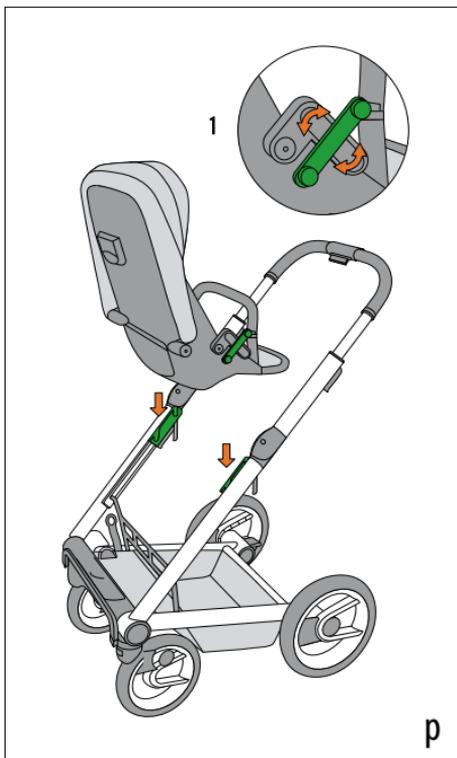


p



q

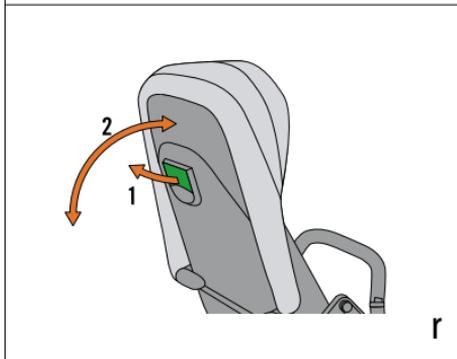


r

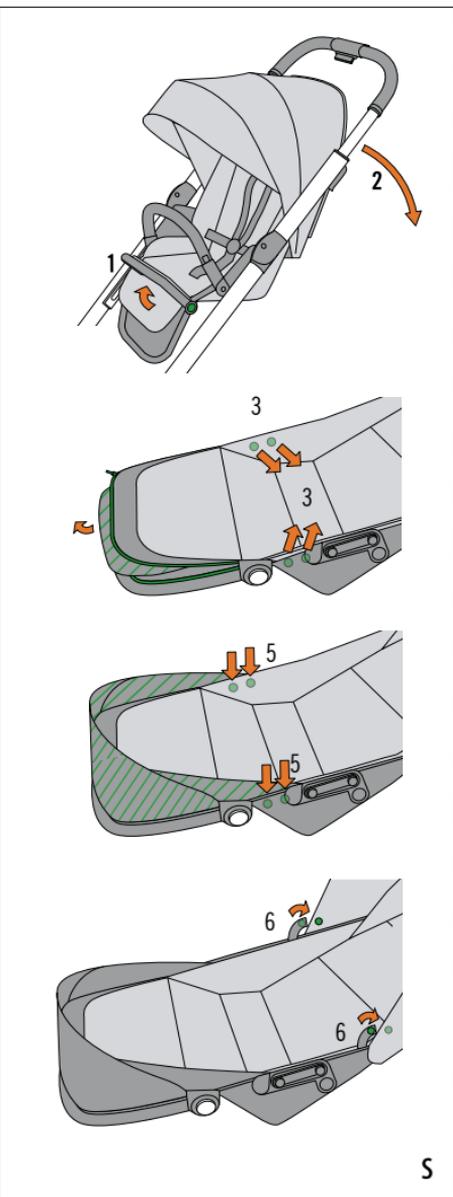

s



t

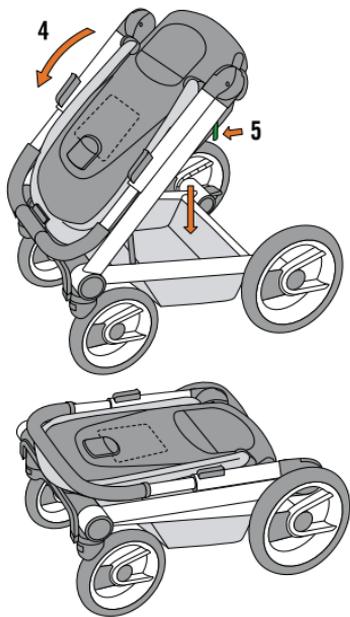


t




V2




W

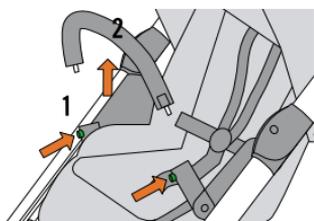


U<sup>1</sup>

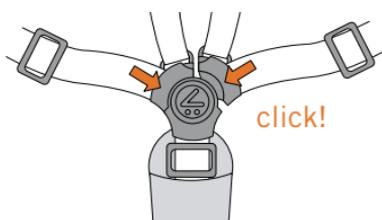

X1

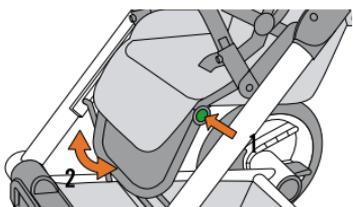


U<sup>2</sup>

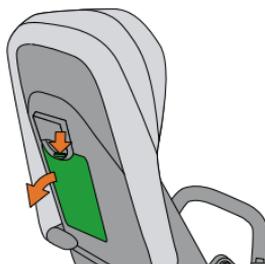

X2



V1

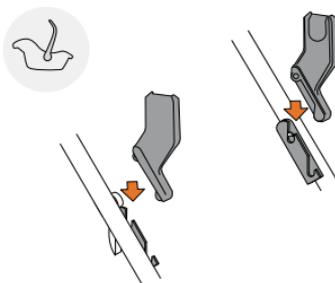

y

# Instruction manual Mutsy Igo

## Content

Introduction .....	p 2
Warnings.....	p 2
Guarantee .....	p 4
Maintenance and points for attention.....	p 5
Content of the box.....	p 6
Summary of parts: corresponding to the summary diagram.....	p 6
Orientation .....	p 6
The chassis .....	p 7
The wheels.....	p 7
The brake .....	p 8
The push bar .....	p 8
The carry cot .....	p 8
The seat.....	p 9
The Maxi-Cosi car seat.....	p 12

## Introduction

In order to make optimal use of this product we recommend you use it properly and maintain it well. Read these instructions for use carefully before you start using the pushchair and keep the instructions for future reference.

Should you have any questions, comments or complaints please contact your retailer.

If you want to know what accessories are available for this product or if you want to stay informed of new Mutsy products then go to [www.mutsy.com](http://www.mutsy.com).

## WARNINGS

- **IMPORTANT:** Keep these instructions for future reference.
- **WARNING:** Failure to observe the instructions for use may put your child's safety at serious risk.
- **WARNING:** You are responsible for your own child's safety.
- ! • **WARNING:** To avoid injury or death:
  - Always apply the brakes whenever the pram / stroller is stationary.
  - Do not leave children unattended.
  - Secure the child in the harness at all times.
  - Do not carry extra children or bags on this pram / stroller.
  - Make sure children are clear of any moving parts if you adjust the pram/ stroller.
- **WARNING:** Use the harness at all times.
- **WARNING:** Never leave the harness buckled when not fitted to a child to prevent a

- strangulation hazard.
- WARNING: Use the tether strap to stop the pram / stroller rolling away.
  - WARNING: Don't use the pram / stroller near open fire or exposed flame.
  - WARNING: This vehicle is designed for use on flat or gently slopes and may be unstable on higher sloping and uneven surfaces.
  - WARNING: Failure to observe the instructions may cause the vehicle tipping over.
  - WARNING: If your child is younger than 6 months always use the carry cot or the reclined carriage position of the seat.
  - WARNING: Do not use the seat with any other models of cot/stroller.
  - WARNING: The seat unit is not suitable for children under 6 months.
  - WARNING: The seat is suitable for children from 6 months and up to 25 kg.
  - WARNING: Do not use the carrycot once the child can sit up unaided. The maximum weight of the child is 9 kg.
  - WARNING: The pushchair is suitable for children up to 25 kg.
  - WARNING: The maximum permissible weight as indicated on the relevant product applies when using a car seat.
  - WARNING: For car seats used in conjunction with the chassis, this vehicle does not replace a cot or a bed. Should your child need to sleep, then it should be placed in a suitable carry cot, cot or bed.
  - WARNING: A shopping basket is located between the wheels underneath the chassis. The maximum permissible weight for this basket is 5 kg.
  - WARNING: The carry cot has a number of bags. The maximum permissible weight in each bag is 1 kg.
  - WARNING: Overloading can result in a dangerous, instable situation.
  - WARNING: Bags, accessories or both, other than recommended by the manufacturer, can, when placed on the product, result in an unstable pram. Exclusively use original Mutsy accessories.
  - WARNING: Shopping bags or other heavy objects must not be hung on the push bar due to the risk of toppling.
  - WARNING: Do not let your child play with this product.
  - WARNING: Never leave your child unattended, this can be dangerous.
  - WARNING: To avoid pinching of fingers or other body parts, keep children away from the chassis when folding and unfolding the product.
  - WARNING: After unfolding the seat, always push the bumper bar to its upright position before placing a child in the seat. Make sure that no child is near the bumper bar when moving it .
  - WARNING: Ensure that the chassis and handlebar are completely unfolded and that all locking devices are engaged before use.
  - WARNING: Check that the carry cot or seat unit or car seat attachment devices are correctly engaged before use.
  - WARNING: Before use, check that the attachment points of the carry cot, the pushchair or the adapters have been secured correctly.

- WARNING: Always check that the accessories have been secured properly before you start using the pram.
- WARNING: Do not use the carry cot with a mattress thicker than 25 mm / 0,984 inch. Do not add an additional mattress.
- WARNING: Only use the pram for one child at a time.
- WARNING: Make sure that the brakes are applied when placing or removing your child.
- WARNING: Always use the restraint system.
- WARNING: Always secure your child with the 5-point safety harness combined with the strap running between the legs.
- WARNING: You must take your child from the pram before lifting the cot or using stairs, escalators or lifts.
- WARNING: You need to tilt the pram/stroller and drive to the rear wheels if you go on or off a curb.
- WARNING: Always apply the brakes when parking the pram.
- WARNING: This product is not suitable for running or skating.
- WARNING: Use only replacement parts supplied or recommended by Mutsy.
- ! · WARNING: Use the tether strap to stop the pram/stroller rolling away.
- WARNING: Always keep the pram/stroller away near an open fire or exposed flame.
- WARNING: The pram/stroller is only designed for use on flat or gently sloping surfaces and may become unstable on higher sloping and uneven surfaces.
- The Mutsy IGO has been approved according to AS/NZS standard 2088-2013.

### *Guarantee*

All Mutsy products come with a guarantee period of two years, starting on the day of purchase. If you encounter a production defect, Mutsy will work with the retailers to provide a solution. Production defects will be repaired under guarantee.

The guarantee does not apply to exchanging or returning Mutsy products. The guarantee will only be honoured if you can provide the following at the store at which the product was purchased:

- a completed guarantee card
- a copy of the purchase receipt
- a clear description of the defect
- your product

### *The guarantee card can be found on:*

[www.mutsy.com/gben/service/warranty](http://www.mutsy.com/gben/service/warranty). This card must be completed correctly and submitted digitally. You will also need to enter the serial number. This number can be found on a white sticker on the product; it is usually located on the underside.

### *The guarantee does not apply:*

- if the problem concerns fabric discolouration
- if the fabric has been damaged by water
- in relation to damage caused by the use of non-original Mutsy accessories.
- if you cannot provide the purchase receipt
- if you have used the product incorrectly or unreasonably
- in relation to regular wear and tear that occurs as a result of day-to-day use
- in the event of damage caused by bad maintenance, neglect or an accident
- if damage has been caused as a result of modifications to the product that have been carried out by the consumer, without permission from the manufacturer
- if the damage is not reported promptly (within 2 months)

Mutsy provides no guarantee in relation to shrinkage or defects concerning the fabric elements that have been caused as a result of cleaning.

Safety is a priority for Mutsy. We therefore fulfil the highest safety standards:

- Europe: EN 1888
- UK: BS EN 1888
- Canada: SOR/ 85 - 379
- AS/NZS standard 2088-2013

For questions or comments, please contact us via: <https://mutsy.com/gben/contact>

### *Maintenance and points for attention*

#### *The chassis*

- Regularly check the locking mechanism of the chassis. After cleaning you can spray some Teflon spray on it and rub it with a soft cloth. This also applies to other moving parts.

#### *The wheels*

- To let the wheels run more smoothly the wheel axles must regularly be cleaned and lubricated with acid-free vaseline. The wheels can never be lubricated with oil.

#### *The fabrics*

- Removable fabric parts can be washed in the washing machine on a wool cycle at 30°C. Wash without bleaching agent and do not put in the tumble dryer. Do not iron or dry clean. Before washing fasten all zips, velcro and poppers.
- To find out how to take the seat covers on and off the pushchair, please

go the FAQs in the 'Service' section of our website.

- All Mutsy fabrics have been tested for water resistance but if the pram gets really wet, water can penetrate the inner and outer fabrics and leave marks. To prevent this we recommend that you always use the rain covers in case of wet weather.
- You can treat stains on the outer fabric or lining of non-removable parts using a liquid, bleach-free soap. Always treat the whole area.
- Always let a wet pram dry with the hood fully unfolded.
- Even though Mutsy fabrics are selected with the utmost care and tested for colour fastness, fabrics can discolour. Mutsy cannot be held liable for any discolouration.

### *Content of the box*

- 1 chassis with basket
- 2 front wheels
- 2 rear wheels

### *Summary of parts: corresponding to the summary diagram*

01. push bar
02. push bar adjustment
03. built-in safeguard
04. chassis unlocking buttons
05. attachment point
06. unlocking button for seat, carry cot and adapters
07. folding safeguard
08. brake pedal
09. rear wheel
10. front wheel
11. swivelling wheel locking
12. wheel unlocking button
13. foot rest
14. leg support
15. leg support adjustment
16. bumper bar
17. 5-point safety harness
18. hood
19. carry handle

### *Orientation*

- References in the text to the front, rear, left or right side of the pram are described from the perspective of a user walking behind the pram.

## *The chassis*

### *Unfold the chassis (a, b)*

- Press the folding safeguard inwards (a1) and tilt the upper chassis until the lower support clicks into place (a2) and move the pushbar backwards until you hear a second click (b).
- If you unfold the chassis, with the pushchair seat fitted to the chassis, you then have to manually raise the front brace afterwards.
- Before use always check that the pram has been unfolded and secured correctly.

### *Fold the chassis (c, d)*

- Stand behind the chassis and put the chassis on the brake. Push the height adjustment button (c1) of the pushbar in and move this to the lowest setting. Pull the folding safeguard (c2) towards you on both sides and turn the pushbar forwards until the pushbar lies on the frame (c3).
- Pinch the chassis unlocking buttons and fold the chassis (d).
- The folding safeguard locks automatically when the product is folded up.
- The integrated carry handle, which is located under the rear axle, has made lifting and carrying the folded pushchair more practical.

## *The wheels*

### *Assemble the rear wheels (e)*

- Slide the axle of the rear wheel in the rear wheel casing until you hear a click. Pull the wheel to check that it has been attached firmly.

### *Disassemble the rear wheels (f)*

- Press the button on the inside of the rear wheel casing and take the wheel off the chassis

### *Assemble the front wheels (g)*

- Slide the axle of the front wheel upwards in the front wheel casing until you hear a click. Pull the wheel to check that it has been attached firmly.

### *Disassemble the front wheels (g)*

- Push the button on the front side of the front wheel and pull the wheel from the front wheel casing.

## *The swivelling wheels (h)*

- Turn the ring above the front wheel inwards on both sides in order to block the swivel setting. The swivelling wheels will automatically be locked when the wheels are placed in the rear direction.

- Turn the ring above the front wheel on both sides outwards to unlock the swivelling wheels.

### *Pumping up the air tyres (IGO accessory: rear wheels air tyre set)*

- The air pressure in the air tyres may decrease after a while. Check the pressure regularly and is necessary pump up the tyres.
- Press the pump firmly onto the valve. Pump up the tyres until the required air pressure has been reached. The air pressure in the tyres may never exceed 16 PSI / 1.1 bars.
- Air tyres may leave traces on some surfaces.

### *The brake (i)*

- Push the pedal downwards with your foot to block the brake.
- Push the pedal upwards with your foot to unblock the brake.

### *The push bar (j)*

- The push bar has three different height positions. Press the pushbar setting button and move the pushbar higher or lower while keeping the button depressed.
- Release the button when the push bar is in the desired position.

### *The carry cot (up to 9 kg)*

- The carry cot is suitable for transporting children from birth up to 9 kg in a lying position.
- The carry cot is suitable for a child who cannot sit up by itself, roll over and cannot push itself up on its hands and knees.
- You can also use the carry cot separately from the chassis.
- Check the base, the edges and the carry belts on the carry cot regularly for any wear and tear.
- Make sure that the chassis has been fully unfolded and the brake is blocked during all actions indicated below.

### *Place the carry cot (k)*

- Place the attachable elements on the carry cot into the attachment points on the chassis and press the carry cot downwards until you hear a click on both sides.
- Check to ensure that the red sections on the chassis attachment points are no longer visible. Check that the carry cot has been installed securely by trying to lift it from the chassis.

### *Remove the carry cot (l)*

- Slide the unlocking buttons upwards until you hear a click on both

sides. Be careful! The carry cot is now unlocked; the red sections on the chassis attachment points are now visible. Take the carry cot firmly by the handle on the hood and remove it from the chassis in a vertical movement.

### *The hood (m)*

- The hood can be unfolded by moving it upwards.
- Push and hold the buttons on the sides of the hood. The hood can now be folded downwards.

### *Assemble the rain cover on the carry cot (n)*

- Make sure that the hood of the carry cot has been unfolded.
- Place the rain cover from top to bottom over the carry cot and make sure that the rain cover attaches well all around the bottom of the carry cot.
- Close the Velcro strips around both sides of the chassis.
- Open the zipper in order to remove your baby from the carry cot when using the rain cover.

### *The seat (6 months – 25 kg)*

- The seat is suitable for children from 6 months up to 25 kg who can sit independently.
- When in the drive position, the seat can be folded and unfolded with the chassis and does not therefore need to be removed from the chassis.
- The back support and leg support are adjustable.
- Make sure that the chassis has been fully unfolded and the brake is blocked during all actions indicated below.

### *Moving the seat unit to face forwards (o)*

- Place the attachable elements on the seat into the attachment points on the chassis and press the seat downwards until you hear a click on both sides. NB! Place both ridges on the attachment elements into the chassis attachment points at the same time.
- Check that the chair has been attached solidly by trying to lift it from the chassis.

### *Moving the seat unit to face backwards (p)*

- In order to place the seat unit so that it is facing backwards, the attachment elements on the seat need to be turned by 90 degrees. Press the button (p1), the attachment elements will unlock and spring out. Turn the attachment elements to the correct setting and then click into place.
- Then place the attachable elements on the seat into the attachment

points on the chassis and press the seat downwards until you hear a click on both sides. NB! Place both ridges on the attachment elements into the chassis attachment points at the same time.

- Check that the chair has been attached properly by trying to lift it from the chassis. NB! The chassis cannot be folded with the seat facing backwards!

### *Remove the seat (q)*

- Slide the unlocking buttons upwards until you hear a click on both sides. Be careful! The seat is now unlocked; the red section on the chassis attachment points are now visible. The seat can vertically be removed from the attachment points.

### *Adjust the back support (r)*

- Pull the button at the back of the seat upwards and hold it upwards.
- The back support has 4 positions. Place the back support in the desired position and release the button to lock the position.

### *Reclined carriage position (s)*

- The seat has a reclined carriage position to make the seat suitable for children from birth. The use of a suitable carry cot is always recommended and preferred for children from birth up to the age that your child can sit up unassisted.
- To put the seat in the reclined carriage position, put the leg rest in its highest position and the backrest of the seat in its fully reclined position. Release the two press studs on each side of the seat. Open the zipper around the leg support. There is a fabric wall in the pocket behind the leg support, which you can pull out. Now you can put the wall up and attach the two press studs on each side onto the seat. The press studs of the seat can now be attached to the press studs of the wall. The hood of the seat needs to be in the first upright position. There are 2 straps on either side of the seat to keep the canopy in this position. Make sure the two straps on either side of the seat are attached to the press studs on the canopy.

### *Folding the chassis with the seat facing forwards (t)*

- Stand behind the chassis and put the chassis on the brake. Fold the hood back if it is folded out. Fold the seat unit in two by tilting the back support forwards (t1).
- Push the height adjustment button (t2) of the pushbar in and move this to the lowest setting. Pull the folding safeguard (t3) towards you on both sides and turn the pushbar forwards until the pushbar lies on the

frame (t4).

- Pinch the chassis unlocking buttons and fold the chassis (t5).
- The folding safeguard locks automatically when the product is folded up.
- The integrated carry handle, which is located under the rear axle, has made lifting and carrying the folded pushchair more practical.
- NB! The chassis cannot be folded with the seat facing backwards!

### *Unfolding the chassis with the seat (a, b)*

- Press the folding safeguard inwards (a1) and tilt the upper chassis until the lower support clicks into place (a2) and move the pushbar backwards until you hear a second click (b).
- After unfolding the seat, always push the bumper bar to its upright position before placing a child in the seat. Make sure that no child is near the bumper bar when moving it.
- Before use always check that the cot has been unfolded and secured correctly.

### *Attach and remove bumper bar (u1)*

- To secure the front bumper, press the ends of the bumper into the recesses intended for this purpose on the seat until you hear a click.
- Press the unlock buttons on both sides of the front of the bumper bar to remove the bumper bar from the chair.

### *Adjust the leg support (u2)*

- Lift the leg support to place it upwards.
- Push the buttons on both sides of the leg support and push the leg support downwards to lower it.

### *The hood (v1, v2)*

- Hold the front hood bar in the centre and move it forwards or rearwards to adjust the hood (v1)
- Open the zipper at the back of the opened hood in order to enlarge it. Close the zipper to again reduce the hood (v2)
- Pull the flap on the front side of the hood outwards to additionally enlarge the hood. Push the flap inwards to again reduce the hood.

### *Assemble the rain cover on the pushchair (w)*

- Make sure that the hood of the seat is in the upright position.
- Open the zipper in the rain cover in order to attach it to the enlarged hood of the seat.
- Place the rain cover from top to bottom over the pushchair and make sure that the rain cover is attached well behind the back support and

over the leg support.

### *The 5-point safety harness (x1, x2)*

- Place your child in the pushchair and make sure that the legs of your child are placed on each side of the leg piece.
- Make sure that the hip and shoulder belt is positioned correctly over your child and place both plastic clamps in the central part of the harness attached to the leg piece (x1).
- To adjust the length of the shoulder straps, loosen the shoulder protectors from the belt by undoing the velcro. This will reveal the belt buckles. Adjust the length by sliding the buckles along both shoulder straps until your child is comfortably secure. After adjusting, press down the velcro on both sides to relock the shoulder protectors in place.
- The back support contains three positions for the shoulder belts. To adjust the position, open the panel behind the back support (x2). Loosen the shoulder belts by moving the attachment rings through the openings. Move the attachment rings through the desired openings so that the shoulder belts are positioned properly and click the panel back.
- Regularly check the length and position of the belts and adjust, where necessary.

### *Maxi-Cosi car seat*

- The Maxi-Cosi car seat adapters are suitable for use with the following Maxi-Cosi group 0+ car seats: Maxi-Cosi Mico, Maxi-Cosi Citi.
- Always observe the instructions in the manual of your Maxi-Cosi car seat before you start using the car seat.
- Make sure that the chassis has fully been unfolded and the brake blocked during all actions indicated below.

### *Place the Maxi-Cosi adapters on the chassis (y)*

- The adapter marked with 'R' is placed on the right side of the chassis, the adapter marked 'L' is placed on the left side.
- Slide the adapters in the attachment parts and press solidly until you hear a click.

### *Place the Maxi-Cosi car seat on the adapters*

- Orientate the Maxi-Cosi car seat such that it is directed rearwards on the chassis.
- Hold the Maxi-Cosi car seat with the central hinge points of the support bar directly above the adapters.

- Lower the Maxi-Cosi car seat and press solidly into the adapters until you hear a click.
- Check that the Maxi-Cosi car seat has been placed horizontally and has been attached properly by trying to lift it from the chassis.

#### *Remove the Maxi-Cosi car seat from the adapters*

- Operate the unlocking system of the Maxi-Cosi car seat. Lift the Maxi-Cosi car seat straight up from the chassis.

#### *Remove the Maxi-Cosi adapters from the frame*

- Slide the unlocking button on the frame attachment points upwards until you hear a click. The adapter can now be taken off the frame.

**mutsy.com**

Nieuwkerksedijk 14

5051 HT Goirle

the Netherlands

T + 31 (0)135345152

F + 31 (0)135341163

E [info@mutsy.nl](mailto:info@mutsy.nl)

**mutsy**   
simple human magic